


# STEP BY STEP INSTALLATION

## [MAY 520 RAINSHOWER SET]

Step 1: Install 2 wall bracket

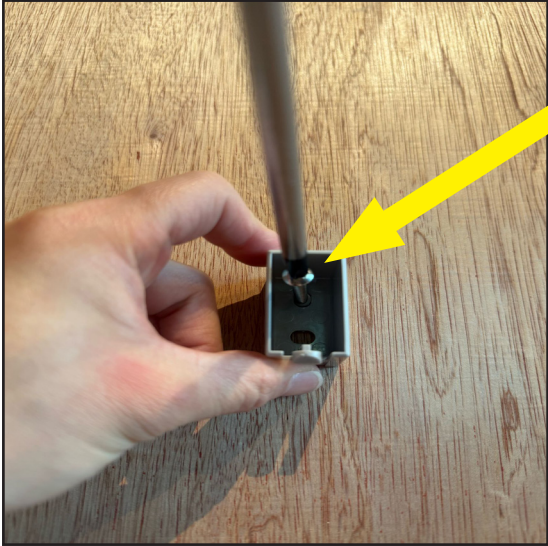

Step 2: Insert first wall holder with the hole facing downwards



Step 3: Tighten screw at the back to secure the rod height.




Step 4: Slot in the handshower holder



Step 5: Insert second wall holder with the hole facing downwards



Step 6: Attach connector nut

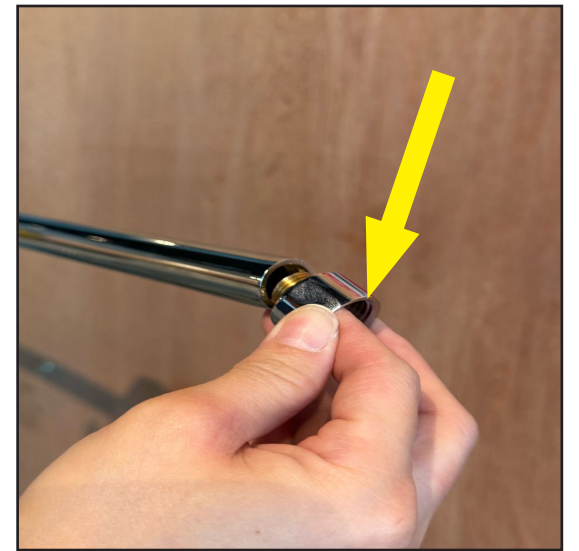


Step 7: Use Allen key, turn anti-clock-wise to tighten connector nut.




Step 8: Attach the shower rod to the wall bracket until it **clicks** securely into place



Step 9: Fix overhead shower

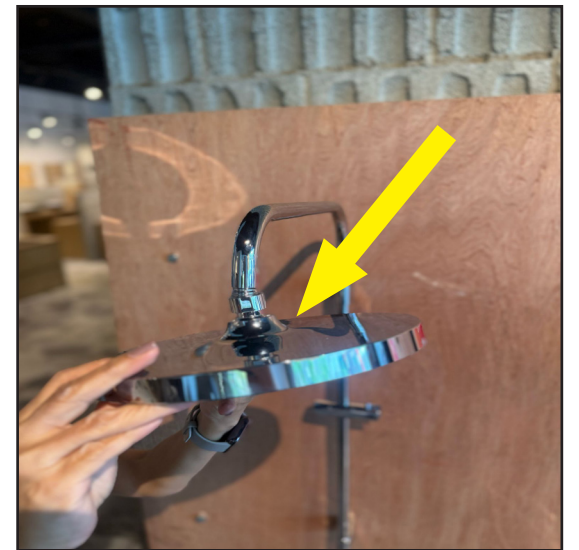

Step 10: Before attaching the diverter to the rod, make sure to install the O-ring for a secure and leak-free connection

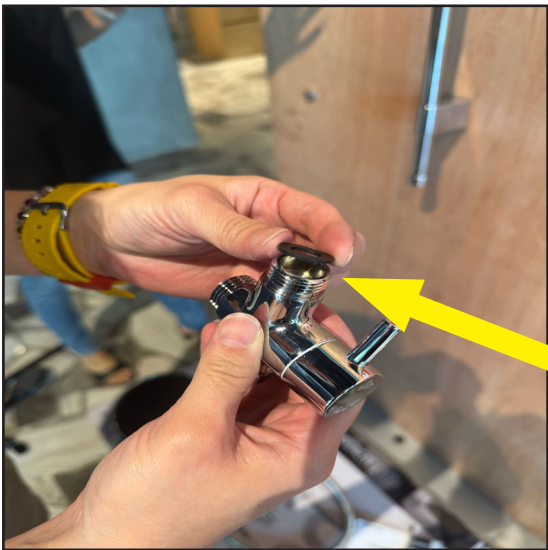

Step 11: Attach diverter to shower rod.




Step 12: Before attaching the handshower, ensure the O-ring is properly seated on the 1.5m hose for a secure connection.






Step 13: Connect the end of the 1.5m hose to diverter.

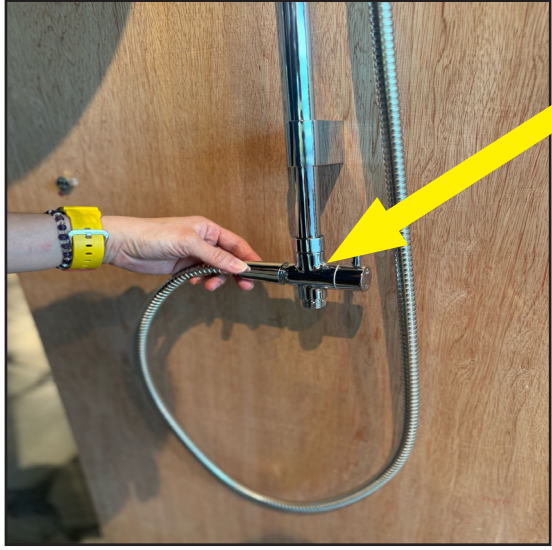

Step 14: Connect the 0.75m hose at the bottom of the diverter.

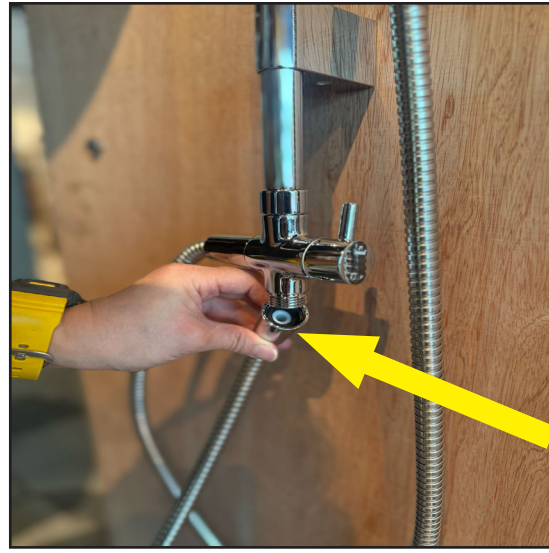

Step 15: Finish product

